

What's in the box

- 1x Belong modem
- 1x Power cable
- 1x Black DSL cable*¹
- 2x White Ethernet cables*²
- 1x Wi-Fi card

*¹ The DSL cable is not needed for your set up.

*² You can use the spare white Ethernet cable to connect the modem directly to a device.



Do you rely on medical, fire or security alarms that make distress calls?

Check with the manufacturer of your emergency device to see if it will work on the nbn network.



Noticed some white particles on your modem?

Don't worry, it's because we've decided to reduce our plastic and the new cardboard boxes shed a few fibres.



For best results, position your modem on a flat surface with the holes facing up and nothing covering them, or on a wall with the holes facing away from the wall.

BELONG

How to set up your Belong modem

Check your nbn box

The nbn box and power cord may already be installed at your premises. Check that the coaxial cable and power is connected between the wall sockets and the box and make sure its power is turned on.

Can't find your nbn box? If you haven't been notified that it's on its way, it may have been misplaced. Contact us at belong.com.au/contact-us and we'll organise a new one.

Connect modem to nbn box


Grab the white **Ethernet** cable and plug one end into the **UNI-D** port on the nbn box.

Plug the other end into the red **WAN** port on the back of your Belong modem.

Plug in your modem and turn its power on

Your modem may take up to 10 minutes before it's ready to use.

When the **Sync**, **Internet** and **Status** lights turn green the internet is ready to use.

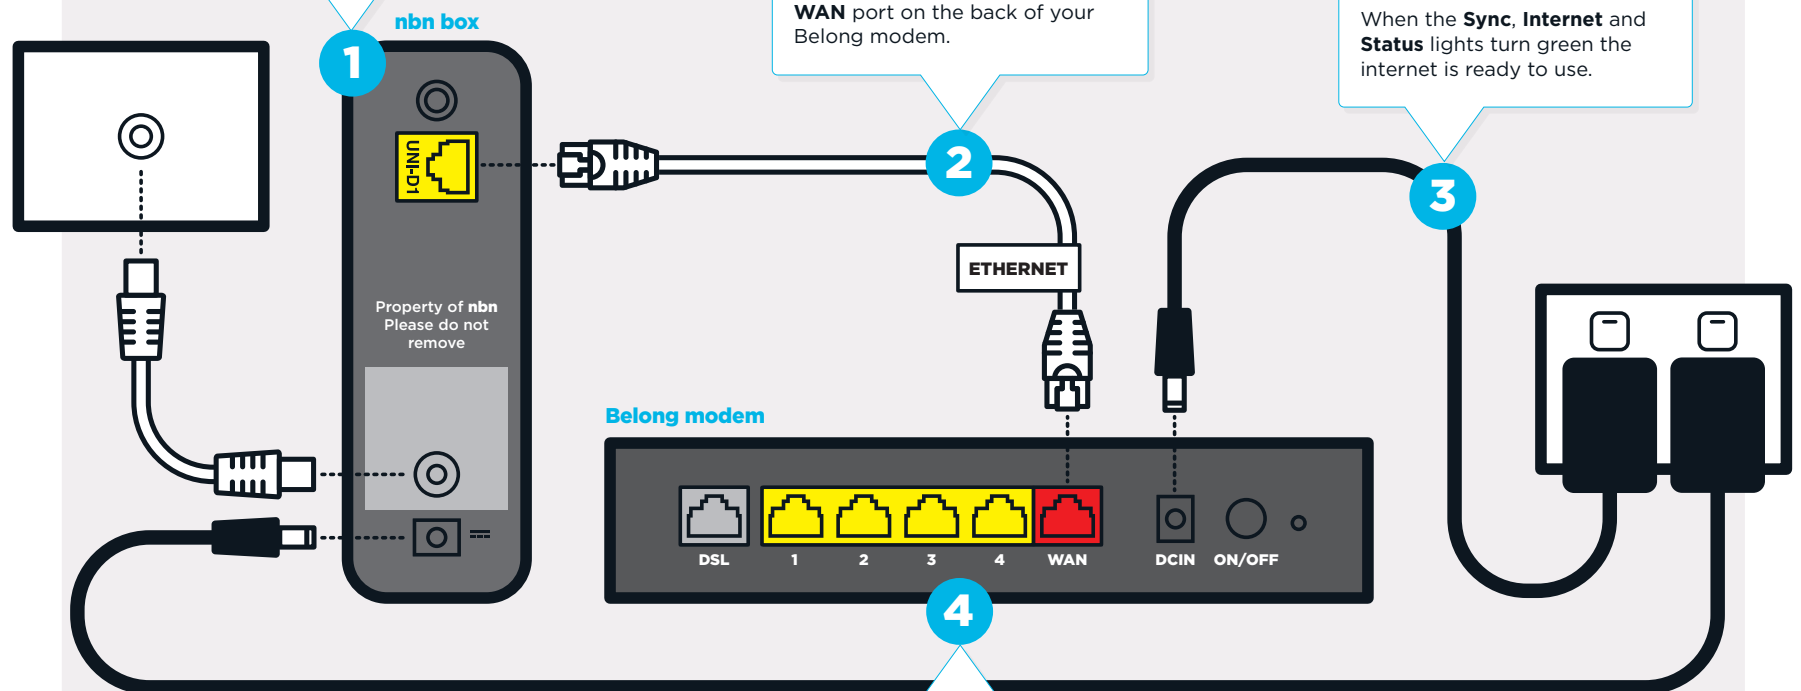

Connect your devices to your Wi-Fi

Point your smartphone camera at the QR code or enter the Wi-Fi password into your device. Both can be found on your Wi-Fi card and on the bottom of your modem.

You can also use the Ethernet cable to connect directly to a device.

Still need help?

Check your email for a step-by-step video guide.